
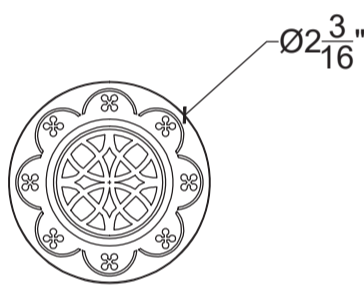


CHISELED ROSE DRAIN

Chiseled Rose Drain - [NO OVERFLOW]
 Bonde de lavabo
 Ref #: 13201496

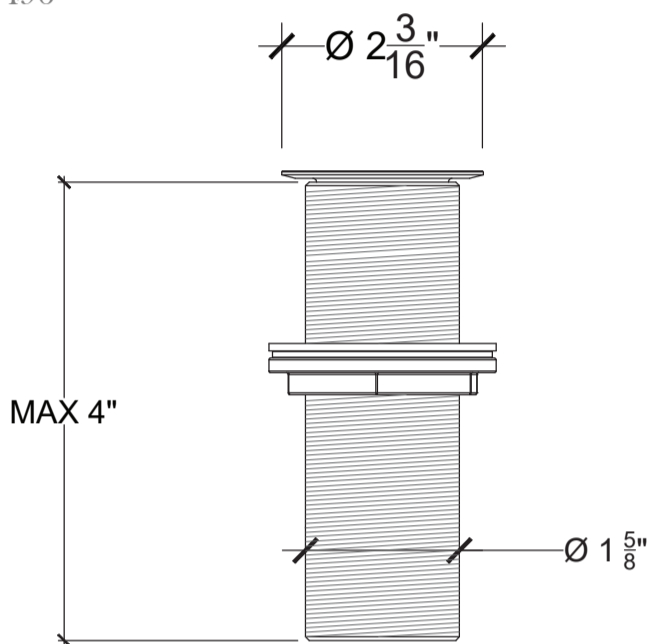

Copyright © Compas 2010 www.compassstone.com

Designed for use with marble sinks.

* DRILLING = $\varnothing 1\frac{3}{4}$ "



 COMPAS™

REVISED 11-13-2019



CHISELED ROSE DRAIN

Chiseled Rose Drain - [WITH OVERFLOW]
 Bonde de lavabo avec trop plien
 Ref #: 13205496

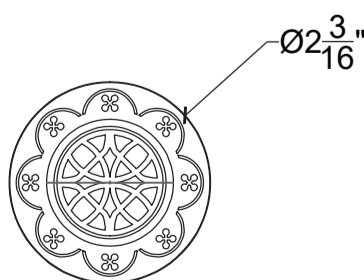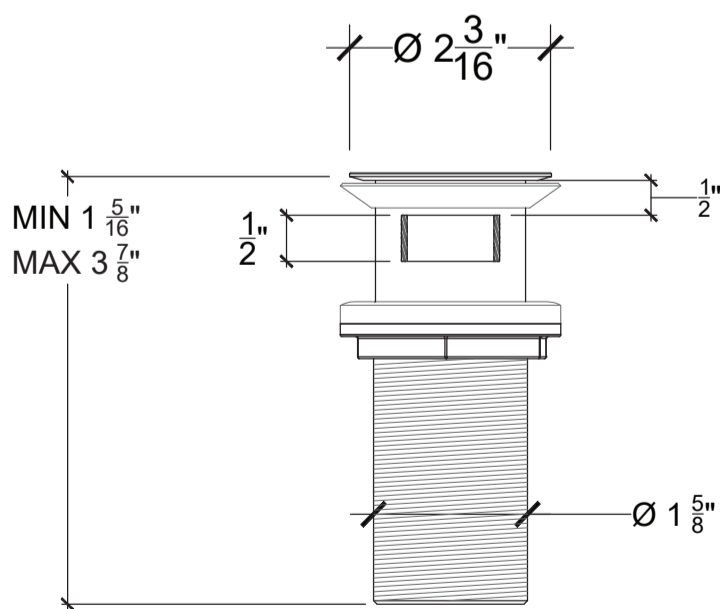

Copyright © Compas 2010 www.compassstone.com

Designed for use with marble sinks.

* DRILLING = $\varnothing 1\frac{3}{4}$ "

 COMPAS™

REVISED 11-13-2019